

<b>ENGLISH</b>	Instructions for use	Page 5
<b>ESPAÑOL</b>	Instrucciones para el uso	Página 18
<b>PORTUGUÊS</b>	Instruções de uso	Página 30
<b>ITALIANO</b>	Istruzioni per l'uso	Pagina 42
<b>ΕΛΛΑΣ</b>	Οδηγίες χρήσης	Σελίδα 54



# **CONTENTS**

**BEFORE USING THE WASHING MACHINE**

**PRECAUTIONS AND GENERAL  
RECOMMENDATIONS**

**DESCRIPTION OF THE WASHING MACHINE  
DOOR**

**CHILD SAFETY (IF AVAILABLE)**

**BEFORE THE FIRST WASH CYCLE**

**PREPARATION OF THE WASHING  
DETERGENTS AND ADDITIVES**

**REMOVING THE FILTER**

**DRAINING RESIDUAL WATER**

**CARE AND MAINTENANCE**

**TROUBLESHOOTING GUIDE**

**AFTER SALES SERVICE**

**TRANSPORT / HANDLING**

**ELECTRICAL CONNECTION**

# BEFORE USING THE WASHING MACHINE

## 1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer
- Check that the accessories and supplied parts are all present
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous

## 2. Remove the transport bolts

- The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed

## 3. Install the washing machine

- Remove the protective film from the control panel
- Move the appliance without lifting it by the worktop
- Install the appliance on a solid and level floor surface, preferably in a corner of the room
- Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level).

## 4. Water inlet

- Connect the water supply inlet hose in accordance with the regulations of your local water company
- Water inlet: Cold water only
- Water tap: 3/4" threaded hose connector
- Water pressure (flow pressure): 100-1000 kPa (1-10 bar).

## 5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied
- If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect)

## 6. Electrical connection


- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations
- Data regarding voltage, power consumption and protection requirements is given on the inside of the door.
- The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above
- Do not use extension leads or multiple sockets
- Before any maintenance on the washing machine disconnect it from the mains supply
- After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service
- Mains cable replacement is only to be carried out by After-Sales Service
- The appliance must only be used in the household for the prescribed uses

### Minimum housing dimensions:

Width:	600 mm
Height:	825 mm
Depth:	600 mm

# PRECAUTIONS AND GENERAL RECOMMENDATIONS

## 1. Packaging

- The packaging material is entirely recyclable, and marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material


## 2. Disposing of packaging and scrapping old washing machines

- The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations
- Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable

## 3. General recommendations


- Do not leave the appliance plugged in when not in use
- Turn off the tap
- Before any cleaning and maintenance switch off the machine or disconnect it from the mains
- Clean the outside of the washing machine with a damp cloth. Do not use abrasive detergents
- Never open the door forcibly or use it as a step
- Children must not be allowed to play with the washing machine or to climb into the drum (see also the following page chapter "Child Safety")
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician

## 4. EC Declaration of Conformity

- The appliance conforms to the following European Standards:  
Low voltage directive 73/23/EEC  
89/336/EEC Electromagnetic Compatibility Directive  
93/68/EC CE Marking Directive. 

# DESCRIPTION OF THE WASHING MACHINE

1. Worktop
2. Control panel
3. Detergent dispenser
4. Service plate (inside the door)
5. Door
6. Child safety device (if provided, inside the door)
7. Filter (behind cover)
8. Plinth
9. Adjustable feet

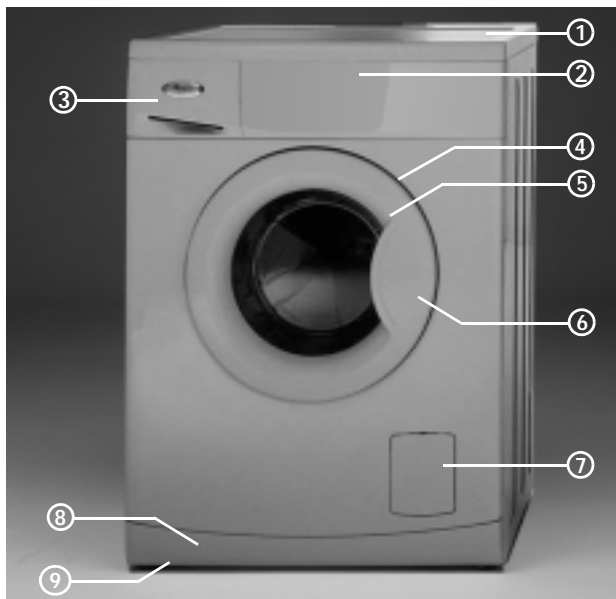

## DOOR

To open the door, hold the door handle, press the inside handle and pull the door. Close the door by pressing it without excessive force until it clicks shut.

## CHILD SAFETY (IF AVAILABLE)


To protect the appliance against improper use, turn the plastic screw on the interior of the door. To do this, use the thick rounded corner of the coloured insert from the detergent dispenser or a coin:

- Slot vertical: the door will not lock
- Slot horizontal - normal position: the door can be locked again



## BEFORE THE FIRST WASH CYCLE

To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry.

1. Open the tap.
2. Close the door.
3. Pour a little detergent (about 30 ml) into the detergent compartment .
4. Select and start a short programme (see quick reference guide).

# PREPARATION OF THE WASHING

## 1. Sort the laundry according to...

- **Type of fabric / care label symbol**  
Cottons, mixed fibres, easy care/synthetics, wool, handwash items
- **Colour**  
Separate coloured and white items. Wash new coloured articles separately
- **Loading**  
Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.
- **Delicates**  
Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag


## 2. Empty all pockets

Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub.

## 3. Fasteners

Close zips and fasten buttons or hooks; Loose belts or ribbons should be tied together

## Stain removal

- Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the detergent  dispenser chamber
- Pre-treat heavily-soiled areas with stain remover if necessary

## Dyeing

- Only use dyes that are suitable for washing machines
- Follow the Manufacturer's instructions
- Plastic and rubber parts of the washing machine can be stained by dyes

## Loading the laundry

1. Open the door.
2. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the quick reference guide.  
**Note:** overloading the machine will result in unsatisfactory washing results and creased laundry
3. Close the door.

# DETERGENTS AND ADDITIVES

## The choice of detergent depends on:

- type of fabric (cottons, easy care/synthetics, delicate items, wool).  
**Note:** Use only specific detergents for washing wool
- colour
- the wash temperature
- degree and type of soiling

### Remarks:

Any whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents.

Use only detergents and additives specifically produced for domestic washing machines.

When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines. Descalers could contain products which could damage your washing machine.

Do not use any solvents (e.g. turpentine, benzene). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

## Dosage

Follow the dosage recommendations on the detergent pack. They depend on:

- degree and type of soiling
- size of wash  
follow the detergent manufacturer's instructions for a full load;  
half load: 3/4 the amount used for a full load;  
Minimum load (about 1 kg):  
1/2 the amount used for a full load
- water hardness in your area (ask for information from your water company). Soft water requires less detergent than hard water (refer to the water hardness table in the operating instructions).

**Notes:**

Too much detergent can result in excess foam formation, which reduces washing efficiency. If the washing machine detects too much foam, it may prevent spinning.

Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses.

**Water Hardness Chart**

Water hardness	Characteristics	German °dH	French °fH	English °eH
1	soft	0-7	0-12	0-9
2	average	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26

**Where to put detergent and additives**

The detergent drawer has three chambers (fig. "A").

Chamber

- Detergent for the prewash

Chamber

- Detergent for the main wash
- Stain remover
- Water softener (water hardness class 4)


When using liquid detergent, remove the coloured insert from the detergent container and insert it in the first gap in chamber (fig. "A").

The insert has a scale to make dosing easier.

Chamber

- Fabric Softener
- Liquid starch

Only pour additives in up to the "MAX" mark.

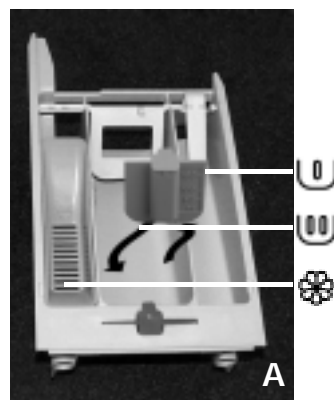**Notes:**

- Keep detergents and additives in a safe, dry place out of the reach of children.
  - Liquid detergents can be used for programmes with prewash. In this case, a powder detergent must be used for the main wash.
  - To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum.
  - When using descaling agents, bleaches or dyes, make sure that they are suitable for washing machines. Descalers could contain components that can attack parts of your washing machine.
  - Do not use any solvents in the washing machine (e.g. turpentine, benzine).
  - If you use starch powder, proceed as follows:
    1. Wash your laundry using the desired wash programme.
    2. Mix the starch to water in a beaker.
    3. Select the "Rinse and Spin" programme, reduce the speed to 800 rpm and start the programme.
    4. Pull out the detergent drawer until you can see about 3 cm of chamber (UU).
    5. Pour the starch solution into chamber (UU) while the water is running into the detergent drawer.
    6. If there are starch residues in the detergent drawer when the programme has finished, clean if necessary (see "Cleaning and Maintenance").
- Take note also of the starch manufacturer's instructions for use.

# REMOVING THE FILTER

We recommend that you check and clean the filter regularly, at least two or three times a year.

**Especially:**

- If the appliance is not draining properly or if it fails to perform spin cycles.
- If the pump is blocked by a foreign body (e.g. buttons, coins or safety pins)

**IMPORTANT: make sure the water has cooled before draining the appliance.**

1. Stop the appliance and unplug it.
2. Open the filter cover. Open the filter cover with the aid of the coloured insert from the detergent container.
3. Place a container beneath it.
4. Open the filter but do not remove it completely. Slowly turn the filter anticlockwise until the water begins to drain out.
5. Wait until all the water has drained.
6. Now unscrew the filter completely and remove it.
7. Clean the filter and the filter chamber.
8. Check that the pump rotor moves freely.
9. Re-insert the filter and screw it in clockwise as far as it will go (handle must be horizontal).
10. Pour about 1 litre of water into the detergent drawer to reactivate the "Eco system". Check that the foreign body trap is inserted properly and securely.
11. Close the cover and lock it.
12. Plug in the appliance once again.
13. Select a programme and start it.



# DRAINING RESIDUAL WATER

**Before emptying the residual water, switch the appliance off and unplug it from the mains socket.**

**Open the cover of the foreign body trap. Open the filter cover with the aid of the coloured insert from the detergent container. Place a container beneath it.**

1. Open the filter but do not remove it completely. Slowly turn the filter anticlockwise until the water begins to drain out.
2. Wait until all the water has drained.
3. Now unscrew the filter completely and remove it.
4. Tilt the appliance forwards carefully to allow the water to flow out.
5. Re-insert the filter and screw it in clockwise as far as it will go (handle must be horizontal).
6. Close the cover and lock it.

**Before using the washing machine again:**

1. Pour approx. 0.5 litre of water into the detergent drawer to reactivate the "Eco system".
2. Plug in the appliance once again.

# CARE AND MAINTENANCE

## Appliance exterior and control panel

- Can be washed down with a soft, damp cloth
- A little neutral detergent (non abrasive) can also be used.
- Dry with a soft cloth

## Door seal


- Clean with a damp cloth when necessary
- Check the condition of the door seal periodically

## Filter

- Check and clean the filter regularly, at least two or three times a year (see "Removing the filter").

### Detergent dispenser

1. Press the release lever in the prewash compartment downward and remove the drawer.
2. Remove the coloured grid (fig. "A") from the fabric softener compartment.  
Remove the insert from the fabric softener compartment.
3. Wash all the parts under running water.
4. Refit the insert and the grid in the detergent drawer and fit the drawer back inside its housing.

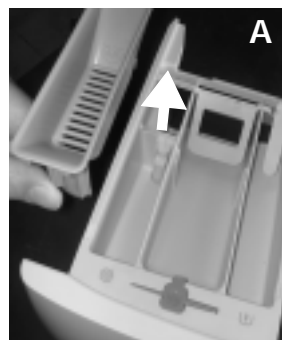

### Mesh filter for water connection

Check and clean regularly.

For washing machines with a straight inlet hose

1. Close the tap and loosen the inlet hose on the tap.
2. Clean the internal mesh filter and screw the water inlet hose back onto the tap.
3. Now unscrew the inlet hose on the rear of the washing machine.
4. Pull off the mesh filter from the washing machine connection with universal pliers and clean it.
5. Refit the mesh filter and screw the inlet hose on again.
6. Turn on the tap and ensure that the connections are completely water-tight.

For machines with Water Stop hose

1. Turn off the tap and unscrew the Water Stop hose from the tap.
2. Clean the internal mesh filter and screw the water inlet hose back onto the tap.
3. Turn on the tap and make sure the connections are completely water-tight.



# TROUBLESHOOTING GUIDE

Depending on the model, your washing machine is equipped with various automatic safety functions. This enables faults to be detected in good time and the safety system can react appropriately. These faults are frequently so minor that they can be removed within a few minutes.

## **The washing machine will not start, no indicator lamps are on.**

 
Check whether:

- the mains plug is inserted into the socket
- the wall socket is functioning correctly (use a table lamp or similar appliance to test it)

## **The washing machine will not start... and the "Start/Pause" indicator lamp flashes.**

Check whether:

- the door is properly closed (child safety);
  - the **"Start/Pause" button** has been pressed.
- In models with LCD display, the display shows:



6thsense Alarm !  
Door is open  
Close it and 00

- the water tap is closed. For models with a "Water tap closed" indicator lamp, the red indicator lamp lights up. Open the tap and press the **"Start/Pause" button**.


## **The appliance stops during the programme (varies depending on model)**

Check whether:

- the **"Rinse Hold"** indicator lamp is flashing; terminate this option by pressing the button again  
In models with LCD display: the **"Rinse Hold"** option has been preselected and the **"Rinse Hold"** symbol appears on the display; cancel this option by pressing the **"00"** button or select the **"Drain"** programme
- another programme has been selected and the **"Start/Pause"** indicator lamp is flashing. Reselect the desired programme and press the **"Start/Pause"** button
- the door has been opened and the **"Start/Pause"** indicator lamp is flashing. Close the door and press the **"Start/Pause"** button again. In models with LCD display, the display shows: **"PAUSE!"**
- the washing machine's safety system has been activated (see **"Fault display chart"**)

## **Residue from detergent and additives left in the detergent drawer at end of wash.**

Check whether:

- the siphon is correctly installed and clean (see **"Care And Maintenance"**)
- sufficient water is entering.  
The mesh filters of the water supply could be blocked (see **"Care And Maintenance"**)
- When using powder detergent beforehand the coloured insert for dosing liquid detergent has been removed from the dispenser 

## **Machine vibrates during spin cycle.**

Check whether:

 
- the washing machine is level and standing firmly on all four feet
- the transit bolts have been removed. Before using the machine, it is imperative that the transport bolts are removed

## **Final spin results are poor.**

The washing machine has an imbalance detection and correction system.


If individual heavy items are loaded (e.g. bathrobes), this system may reduce the spin speed automatically or even interrupt the spin completely if it detects too great an imbalance even after several spin starts, in order to protect the washing machine.

In models with LCD display, in the event of an imbalance, the display shows:



6thsense Warning !  
Unbalance detected  
Automatic correction  
Press 00 button

 - If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle
- Excessive foam formation may prevent spinning. Use the correct amount of detergent  
In models with LCD display, the display shows:



6thsense Warning !  
Overfoaming  
Automatic correction  
Press 00 button

- Check that the spin speed selector has not been set to **"0"**

The programme time indicated on the remaining time display (if fitted) “jumps” up or down suddenly by several minutes, or the programme time shown initially is lengthened/shortened by a period of time:

This is a normal capacity of the washing machine to adapt to factors that the wash programme time can have an effect on, e.g.:





- excess foam formation
- load imbalance due to heavy items of laundry
- prolonged heating time due to reduced delivery of hot water

Because of influences like these, the time remaining in the programme run is recalculated, and updated if necessary. In addition, during the filling phase, the washing machine determines the load and if necessary adjusts the initial programme time displayed accordingly.

## Fault description table

  Small indicator light is on.	Digital display	Fault description
“Water tap closed”	“FH”	“Water supply fault”
“Clean pump”	“FP”	“Draining fault”
-	from “F15” to “F19”	“Electrical module fault”
“Water Stop”	“FA”	“Water Stop Fault”

## Fault description table for models with LCD display


LCD display	Start/Pause button	Fault description
	flashing	Water supply fault
	flashing	Fault in an electrical component
	flashing	Draining fault
	flashing	Water Stop Fault

### a. Water supply fault

 The appliance has no or insufficient water supply.

For models with fault display, the “Water tap closed” indicator lamp lights up or “FH” flashes on the display.

For models with LCD display, the display shows:



For models with no fault display, the washing machine stops in the appropriate programme step.

Stop the appliance and unplug it.

Check whether:

- the water tap is fully open and there is sufficient water supply pressure
- kinks are present in water hose
- the mesh filters of the water supply are blocked (see “Care And Maintenance/Mesh filters for water connection”)
- the water hose is frozen up
- the washing machine has a safety hose and the safety valve is open (red indicator in the safety valve inspection window); In this case replace it with a new safety hose

Plug in the appliance once again.


reselect the desired programme and press the “On/Off” button.

If the fault occurs again, please contact After-Sales Service (see “After Sales Service”).

### b. Draining fault

 Waste water not pumped out.

In models with LCD display, the display shows:



FAILURE FP  
Pump blocked  
Clean the filter  
Press button

For models with a fault display, depending on the model, "FP" lights up and remains lit or flashes. If a "Clean pump" indication is fitted, the red indication next to it lights up.

For models with no fault display, the washing machine stops in the appropriate programme step. Stop the appliance and unplug it.

Check whether:

- kinks are present in the drain hose;
- the pump or the filter is blocked (see "Removing the filter")

**IMPORTANT:** make sure the water has cooled before draining the appliance.

- the drain hose is frozen up

Plug in the appliance once again.

Select and start the "Drain/Reset" programme.

If the fault occurs again, please contact After Sales Service (see "After Sales Service").

### c. Fault in an electrical component

The appliance stops during the programme.

If a digital or LCD display is fitted, "F4" to "F31" are also displayed.

Select and start the "Drain" or "Reset" programme.

Next, select and start the desired programme.

For models with no fault display, the washing machine stops in the appropriate programme step.

Switch the washing machine off and back on again to continue the programme.

If the fault persists, please contact After Sales Service (see "After Sales Service").

### d. Water Stop fault (if available)

The "Water Stop" may have been triggered by:

1. excess foaming
2. a leak in the washing machine

In this case the pump is switched on automatically in order to drain the water

In models with LCD display, the display shows:



FAILURE FA  
Water Stop Fault

For models with a fault display, the "Water Stop" indicator light lights up. The display shows "FA" or alternately "E" and "A" and the pump is running.

Switch off the appliance, unplug it and make sure that the water tap is closed.

Carefully tilt the appliance forwards to allow the water to flow out.

Then:

1. Plug in the appliance.
2. Turn the water tap on (if water immediately flows into the appliance again, without the appliance running, there is a fault. Shut the water tap, then call After-Sales Service).
3. Select and start the desired programme again.

# AFTER SALES SERVICE

## Before contacting After Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the washing machine continues to function incorrectly, call After Sales Service.

## Specify:

- The nature of the problem.
- The washing machine model.
- The service code (number after the word SERVICE).

**SERVICE** 0000 000 00000



The After Sales Service sticker can be found inside the door.

- Your full address.
  - Your telephone number and area code.
- After Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

# TRANSPORT / HANDLING

## Never lift the appliance by the worktop when transporting.

1. Pull out the mains plug.
2. Turn off the tap.
3. Disconnect the inlet and drain hoses.
4. Eliminate all water from the hoses and from the appliance (see "Removing the Filter", "Draining Residual Water").
5. Fit the transit bolts (obligatory)

# ELECTRICAL CONNECTION

## For Great Britain only

### Warning - this appliance must be earthed

#### Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

#### Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

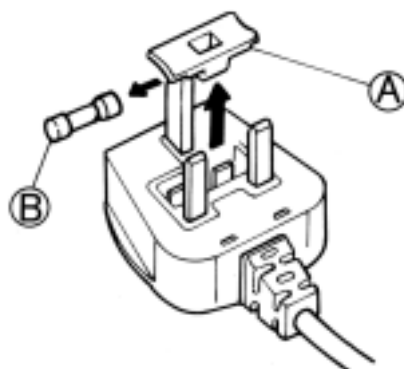

## For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

### Socket outlet / plug (valid for both countries)


If the fitted plug is not suitable for your socket outlet, Please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

## GB AWO 5561

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- A. "Water Tap Closed" indication
- B. "Clean Pump" indication
- C. "Door Locked" indication



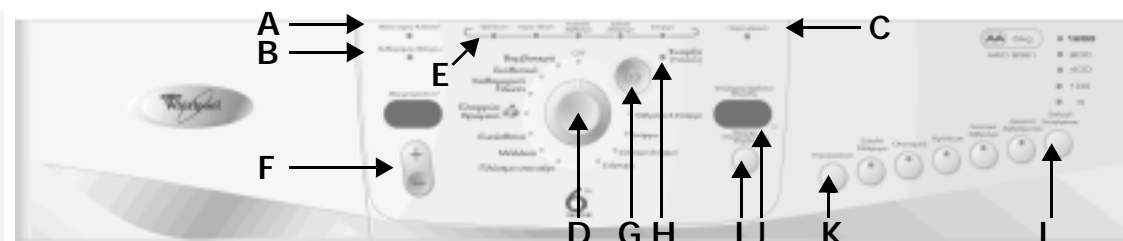





 
 
 



 
 
 


## PROGRAMME CHART



**6<sup>th</sup> sense**

6<sup>th</sup> Sense intelligent technology always guarantees perfect results with maximum efficiency whatever the wash load.

- D. Programme selector knob
  - E. Programme sequence indication
  - F. Temperature selection button
  - G. "Start/Pause" button
  - H. "Start/Pause" indication
  - I. "Start Delay" button
  - J. "Start Delay" indication/"Remaining Time" display
  - K. "Reset" button
  - L. "Spin Speed" button
- Selecting any option the indication lights up. When the combination of programme and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

Programme		Care Labels	Type of wash/Notes	Max Load  kg	Detergents and additives			Special options						Max Spin Speed  rpm	Temperature  °C
					Softener 	Main Wash 	Prewash 	Start Delay <i>Σύστημα Μεταγενέστερης Εναρξης</i>	Easy Ironing <i>Εύκολο Σιδέρωμα</i>	Eco <i>Οικονομικό</i>	Prewash <i>Πρόπλυση</i>	Intensive Rinse <i>Εντατικό Ξέβγαλμα</i>	Rinse Hold <i>Διακοπή ξεβγάλματος</i>		
Cotton	<i>Βαμβακερά</i>	   	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton, coloured cotton and linen. For temperature selection, please respect the manufacturer's recommendation on the care label. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	6.0	*	Yes	*	*	*	*	*	*	*	1200	20 to 95
Synthetics	<i>Συνθετικά</i>	   	Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 60
Daily	<i>Καθημερινή Πλύση</i>	 	Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	*	Yes	—	*	*	—	—	*	*	1200	30 to 60
Superrapid	<i>Ελαφρώς Βρώμικα</i> 		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	*	Yes	—	*	*	—	—	*	*	1200	20 to 30
Delicates	<i>Ευαίσθητα</i>	 	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	—	—	*	—	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 40
Wool	<i>Μάλλινα</i>		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	*	—	—	—	*	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 40
Handwash	<i>Πλύσιμο στο χέρι</i>		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	*	Yes	—	*	—	—	—	*	* <sup>2)</sup>	400 <sup>2)</sup>	20 to 30
Rinse + Spin	<i>Ξέβγαλμα &amp; Στύψιμο</i>	—	Same as the last rinse and the final spin in the "Cotton" programme.	6.0	*	—	—	*	*	—	—	*	*	1200	—
Spin	<i>Στύψιμο</i>	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	6.0	—	—	—	*	—	—	—	—	*	1200	—
Gentle Spin	<i>Σύντομο Στύψιμο</i>	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	*	—	—	—	—	* <sup>1)</sup>	800 <sup>1)</sup>	—
Drain	<i>Στέγνωμα</i>	—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required  
<sup>1)</sup> For improved garment care spin speed is restricted to 800 rpm in this programme.  
<sup>2)</sup> In this programme default spin speed can be increased till 400 rpm.



## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	95	6.0	54**	1.90	2:00
Cotton	60	6.0	49	1.14	2:20
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Daily	40	3.0	45	0.50	1:00
Superrapid	30	3.0	37	0.40	0:30
Delicates	30	1.5	60	0.50	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	45	0.30	0:40

Prewash cycle might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the indication of the **"Start/Pause"** button is flashing.
3. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.  
The recommended temperature (see the indicator) can be altered by pressing **" +/- "** button.

## SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Easy Ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily" programmes to make ironing easier.

- Increases the water quantity and the clothes are spun very soft.

### "Eco" button

- The duration of the wash is extended and the temperature reduced to save up to 40% of energy but maintaining good washing results.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

### "Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme sequence indication is on.

## Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob counterclockwise to the "Drain" programme and press the **"Start/Pause"** button again when the indication next to it is flashing.

## "Spin Speed" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button.  
The indication next to the "Start Delay" button lights up and goes off when the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

## To cancel the "Start Delay"

### ..before you press the "Start/Pause" button:

- Turn the programme selector to the "Off/0" position.
- Reselect the desired programme and options and press **"Start/Pause"** button to start the programme.

### ..after having pressed the "Start/Pause" button:

- Press the "Reset" button for at least 3 seconds - the start delay time disappears from the remaining time indication,
- then either start the chosen programme by pressing the **"Start/Pause"** button twice
- or turn the programme selector knob to the "Off/0" position and chose another programme.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication next to the **"Start/Pause"** button lights up. The indications show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding indication goes out.

## RED INDICATIONS

### "Water Tap Closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean Pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

### "Door Locked"

As long as a washing programme is running, the lamp lights up to show that the door cannot be opened. When the indication goes off, the door can be opened again.

## PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "Off/0" position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry out.

## CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.